


TAMARI APRON

DIGITAL PATTERN



The Tamari Apron is a great year round accessory for all ages! It also can also be layered and worn as a garment! Asymmetric apron has single patch pocket, angled hemline and single shoulder tie.

Idea: Be creative with this pattern. Try using decorative ribbons across the pocket and along the ties. It also looks good using piecing techniques and beading.

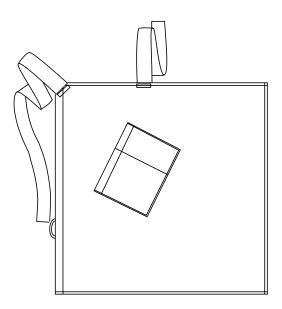

RECOMMENDED FABRICS

Lightweight to Medium-weight Cotton, Linen, Denim, Novelty Weaves.

NOTIONS

Thread

YARDAGE - ONE SIZE

45" 1¾ yards 60" 1¼ yards

PIECE SIZES

 Apron
 37" x 36"
 Short Tie
 5½" x 36"

 Pocket
 11½" x 13½"
 Loop
 1½" x 13"

 Long Tie
 5½" x 49½"

GLOSSARY

BASTE - Machine or hand sew using 5mm length stitch or use Fusi-Web (fusible web tape) to fuse in place.

EDGESTITCH - On right side, stitch close to finished edge or seam.

STAYSTITCH - Using smaller stitches, sew on seamline of seam allowance.

TOPSTITCH - A line of visible stitching emphasizing structural lines of garment while working to keep seams and edges flat and crisp. Use standard stitch length. On right side, stitch ¼" from edge, seamline, or as directed.


FABRIC CUTTING LAYOUT


Place pattern pieces on straight grain of fabric, keeping line parallel to selvage. Cut all pieces along cutting line. Mark all placement lines on WRONG side of fabric.

All layouts are for "with nap". Cutting layouts show approximate position of pattern pieces.

All seam allowances are ½", unless otherwise indicated.

S/L - Selvage

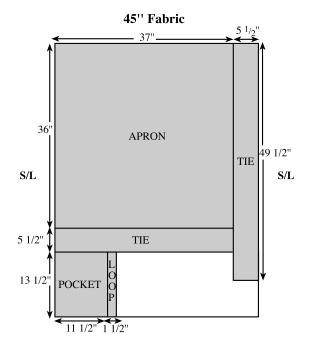


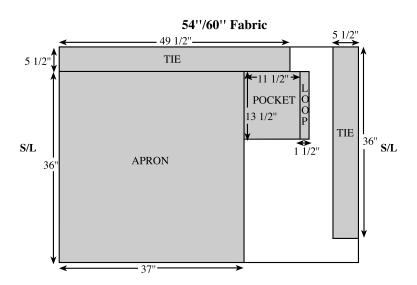

HEMS


1. Press both 37" edges of APRON to wrong side %", then press again %", making a finished hem of %". **TOPSTITCH** hem.

Repeat process on one 36" edge of Apron.

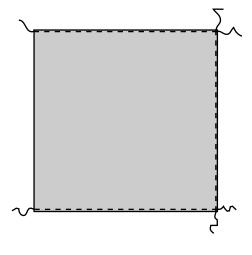


2. Press remaining raw edge of Apron to wrong side 2", then press raw edge $\frac{1}{2}$ " to wrong side, making a finished hem of 1 $\frac{1}{2}$ ".

TOPSTITCH hem.

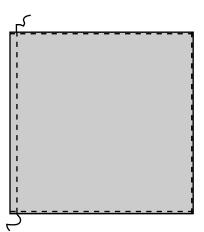


POCKET


3. Press top hem of POCKET to wrong side $1\frac{1}{2}$ ", then $\frac{1}{2}$ ", making a finished hem of 1".

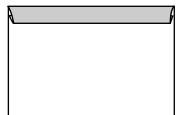


4. With right sides together, turn upper hem of Pocket to outside along pressed edge. Stitch ends in place and continue **STAYSTITCHING** around the Pocket ½" from raw edge.

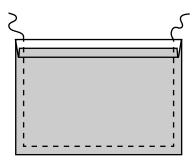


5. Trim upper corners as shown.

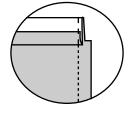


6. Turn hem to wrong side. Press top hem edge flat and press seam allowance of Pocket to wrong side. **TOPSTITCH** top hem.

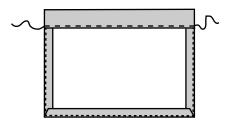

7. Position Pocket on Apron as shown. Hand **BASTE**.

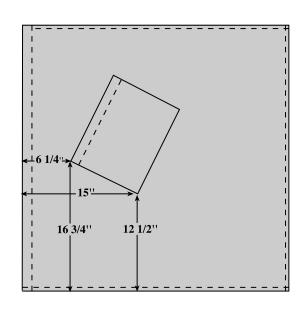


8. **EDGESTITCH** Pocket to Apron. **TOPSTITCH** Pocket sections as shown.

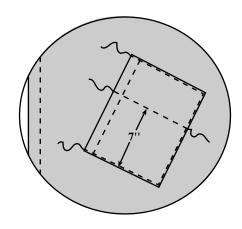


TIES

Note: Finished width of ties is 2 ¼ ". This measurement can be narrowed. Adjust loop placement accordingly.


9. With right sides together, fold ties in half lengthwise. Stitch ½" seam leaving one narrow end open. Trim corners, turn both ties right side out and press seam edges flat. Optional: **EDGESTITCH.**

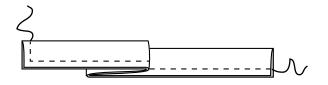


10. With *wrong sides* together, fold back left top corner of Apron and press.

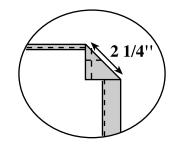

11. Position unfinished ends of ties on wrong side of Apron as shown and **TOPSTITCH**. Attach long tie at corner and short tie at top.

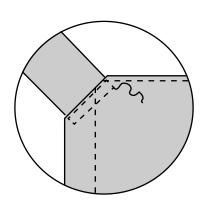


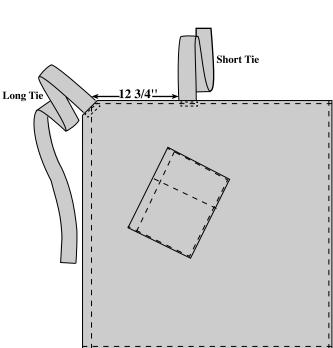


LOOP

12. With right sides together, fold LOOP in half lengthwise. Stitch %" seam on long edge. Trim and turn Loop right side out and press flat. Trim to 4 %" in length.



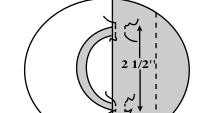

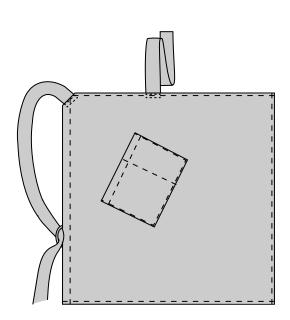

14. To wear, position long tie over left shoulder and diagonally across back. Place long tie through loop to meet short tie in center of back. Loop together and tie to secure.

